

CHARGING ALL TYPES OF BATTERIES CORRECTLY WITH OptiMate PRO4

ALL VOLTAGES VARIED AUTOMATICALLY BY $-24\text{mV}/^\circ\text{C}$

The actual cut-off voltage is that attained within 25m. after passing the 14,5V level & depends on the individual battery's parameters.

