



Oriental Inspiration Limited reserves the right to the interpretation of the product and correlative contents.

Attentions

Please stop using the product if any abnormal phenomena.

Please use neutral solvent to clean the blot, do not use organic solvent.

Please use a long and narrow tool to press on 'Reset' button to recover to default settings if it's crashed (You can refer to page 3 for detailed component location).

Warning

Do not modify any accessories, or our company won't responsible for any malfunctions and calamities may cause.

Do not put the product into fire, or our company won't responsible for any malfunctions and calamities may cause.

Power supply accessories must be operated in the right way as user manual, or our company won't responsible for any malfunctions and calamites may cause.

Contents


Thank you for buying our HD Mobile-i Car Recorder with GPS and G-Sensor.

To guarantee all the functions into fully play and prolong the service life, please read the user manual carefully before installations and keep the product under well cleaning and maintenance.

In line with the policy of continued development, if there are any amendments on the appearance, color or assemblies, please refer to the real object. Our company reserves the right to amend on the specifications and the manual without prior notification.

Contents	2
Product Overview	2
Part List	3
Setup before Use	4
Screen Display	5
Installations	5 6
Video Recording	6 7
Video Playing	8
Software Installation for Player	9
Start Player	10
Video Deletion	10 11 12
LED Status	12
Specifications	13
Warranty Terms and Conditions	13

 
Product Overview

 Please check and confirm all the accessories are available before use.

 
a Main Unit x 1



b Suction Cup Holder with GPS x 1

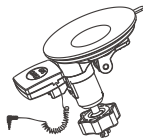



c USB cable for Mini Car Charger x 1



 
d Dual USB Mini Car Charger x 1









 This cable is designed to use together with Mobile-i series products only. Do not use it with other products or car chargers in case of any damage may cause.

 Output: DC 5.0V \pm 2.0A

e USB cable x 1



Part List

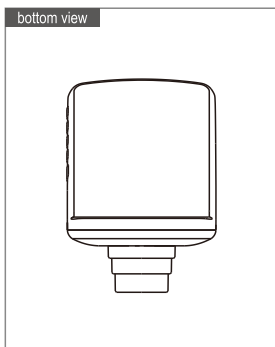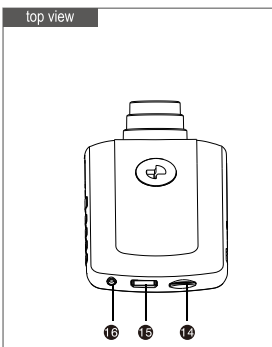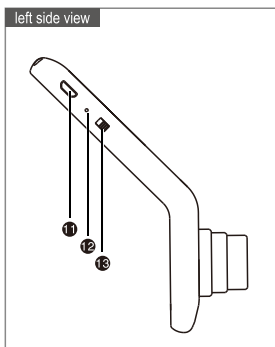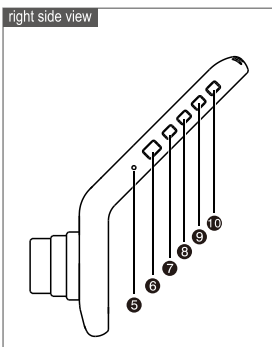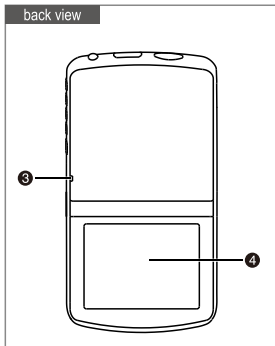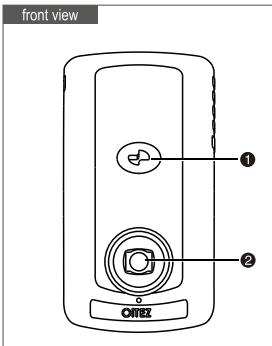      


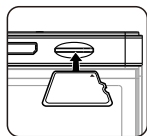 
- ❶ Holder Slot
- ❷ Lens
- ❸ LED Light <Red / Green / Blue>
- ❹ Screen
- ❺ Reset
- ❻ ⏻ Power Switch
- ❼ ↵ Enter
- ❽ ⏏ Mode


- ❾ ∨ Down
- ❿ ^ Up
- ⓫ USB Port
- ⓬ Microphone
- ⓭ Power Master Switch
- ⓮ Micro SD Card Slot
- ⓯ HDMI Port
- ⓰ External GPS Jack




Setting before Use








1. Insert a Micro SD Card into the Slot.

 Support Micro SD Card memory range from 2GB to 32GB. Please buy it according to your own need (We suggest use the one above 4GB)



2. Press <Mode > to enter into Menu for Data Setting, all the data will be factory default if not set up.

 Press on <Mode > to set the menu after power on. Press on <Power Master Switch > and then press on <Power Switch > to turn it on if it is power off.

3. Press on <Mode > to enter into menu setting. Use <Up > or <Down > to select setting and then press on <Enter > to select the relevant option. Use <Up > or <Down > to select and then press on <Enter > to save.

* After entering into the menu, you can set language, resolution, loop recording, format, frequency, date/time, auto power off, beep sound, default setting, record audio, volume, EV, LCD off, GPS info/Unit of GPS, G-sensor and so on.




Objects	Options
Language	Multi Language
Resolution	FHD<1080P> / HD<720P> / VGA
Loop Recording	Off / 1 min / 3min / 5min
Format	Format SD Card
Frequency	50Hz / 60Hz
Date / Time	Adjust date and time
Auto Power Off	Off / 2min / 5min / 10min
Beep Sound	Off / On
Default Setting	Return menu setting to defaults
Record Audio	Off / On
Volume	Off / 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8
EV	Auto / +2.0 / +1.6 / +1.3 / +1.0 / +0.6 / +0.3 / +0.0 / -0.3 / -0.6 / -1.0 / -1.3 / -1.6 / -2.0
LCD Off	Off / 1 min / 3min / 5min
GPS info / Unit of Speed	Off KM/H MILE/H
G-sensor	Off / 1 / 2 / 3 / 4
Version	Version no. display

 Default options are in bold fonts.

Screen Display

 LCD Display

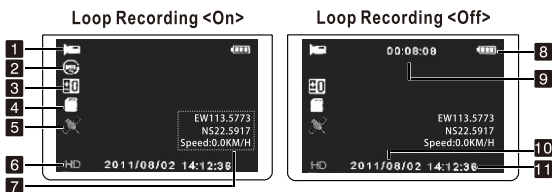



- 1 Recording icon
- 2 Loop recording icon < There is no icon if the loop recording is off. 5 on the icon means every movie clip is 5mins. >
- 3 EV icon
- 4 Micro SD card <It won't display if no SD card inside. >
- 5 GPS icon < The icon color will be gray if getting satellite signal, or it will be red color. >
- 6 Resolution
- 7 EW, NS and Speed data. <It won't display if no satellite signal.>
- 8 Battery capacity
- 9 Balance recording time. <It won't display under loop recording. The recorded time will display during recording. And the balance recording time will change according to SD card memory.>
- 10 Date
- 11 Time

Installations



Please enter into menu settings to set up the date & time and other settings before installations.

- * Setting method please refer to Setting before Use.
- * All the data are factory defaults if not set up .

  
1. Please insert the suction cup holder with GPS into the slot of the main unit and turn the screw to tight them together.

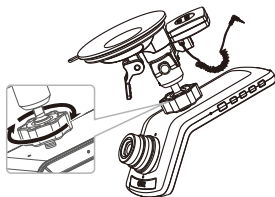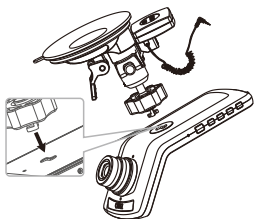

  - * Left turn the knob of suction cup holder to loose and adjust the angle and right turn to fix it.

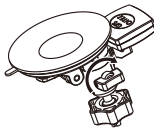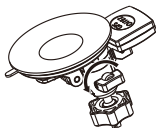


 2. If need to use GPS function, please connect the GPS cable to the GPS jack on Mobile-i.

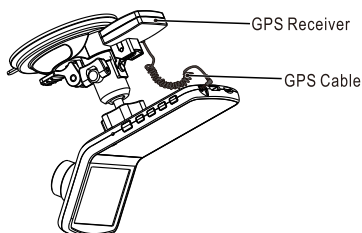


- * The GPS option in menu should be set in KMS/H or Miles/h .
- * GPS receiver with GPS mark should be faced to sky.
- * With shockproof or anti-blast film on windshield, it may affect the satellite signal.
- * GPS signal will be affected according to different places and surroundings.
- * Normally it takes about 5mins to get the satellite for GPS.

 3. Please clean up the windshield (inside), put the holder in front of rear mirror, and then press the lever down to ensure the holder was fixed well.

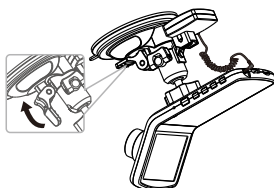

 4. Use the USB cable and dual USB Mini car charger to connect Mobile-i to socket.

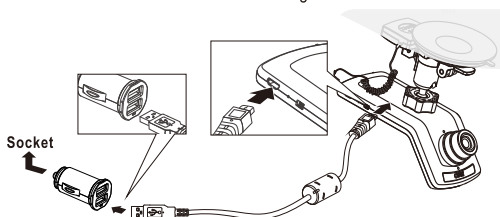


Video Recording

1. Connect HD 720P + GPS + GSENSOR to socket by Duel USB Car Charger and start engine, it'll turn on and start recording automatically. Now the real time image will show on LCD display. Stop engine, it will keep on recording for about 10 seconds and then shut down automatically. If you don't want it keep on recording during your driving, please manually long-press on the <Power Switch> to turn off it.

- * When you set HD 720P + GPS + GSENSOR in loop recording, you can choose every movie clip in 1min, 3mins or 5mins. Recording time depends on the SD card memory. After SD card memory is full, it will erase the first movie clip to free up the memory for continue recording.



 
- * If there are any bumpy or collisions during recording, the recorded movie clip together with the one before and after it will be locked and save forever. You can not directly delete the videos which are locked. If you want to delete, please release the lock first and then delete. You can also format the Mobile-i to delete or connect it to computer to delete. (Please refer to Video Deletion for details.)

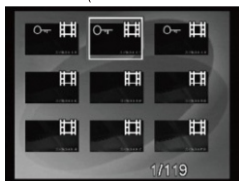





- * No movie clip will be locked if the G-sensor function is not in use.
- * There are four levels "1 / 2 / 3 / 4" for G-sensor setting, 1 is the lowest and 4 is the highest. If there are any bumpy or collisions reach the the setting level during recording, the recorded movie clip together with the one before and after it will be locked and save forever.

- * When 720P + GPS + G-sensor is not in loop recording, every movie clip will be saved in 1.78GB. It'll stop recording after the SD card is full.



- * Please use our standard Duel USB Charger and USB cable for power supply or it may not successfully charged by the ones from others.
- * Some kinds of vehicles are designed for long-term power supply that can't shut down automatically and need manually press on <Power Switch  > to save the video and turn off Mobile-i.
- * Under loop recording is set in off, Mobile-i will save the videos and stop recording automatically when the memory card is full.



2. If HD Mobile-i isn't connecting to the socket, please manually press on <Power Switch  > to turn it on, and then real time image will display on the screen and press on <Power Switch  > to start video recording. Press on <Power Switch  > again to stop recording and save video. Long press on <Power Switch  > to turn it off.

 






- * The first time you use Mobile-i, we suggest charge its battery for about 3 hours.
- * If you won't use Mobile-i for a long time, please recharge the battery up in every two months to prolong its' service life.
- * If the power is too low to turn on, please check the date and time after complete the charge.


Video Playing

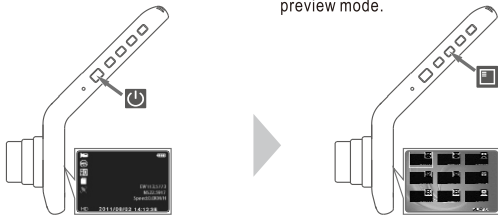1. Play video by Mobile-i LCD display.

- Long-press on <Power Switch  > to turn on Mobile-i.
- Turn on Mobile-i and stop recording, double press on <Mode  > to enter into video preview mode.



 
- Press on <Power Switch  > to access to full screen and then press on <Down  > to play the video.
- Use <Up  > and <Enter  > keys to select avideo.

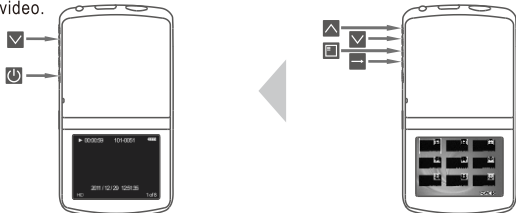


2. Play video by PC

- Remove the Micro SD card from HD Mobile-i, and then insert the SD card into the card reader and connect it to computer. Now it can be used as a large removable disk. Play the video by the supporting media player.

 * Remove Micro SD Card: Press on the SD Card slightly till you hear a sound and it will pop up automatically for pulling out.

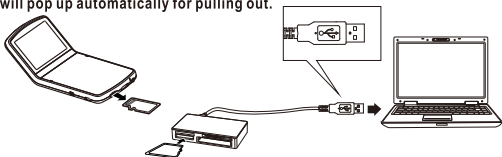

 
- Use the USB cable to connect Mobile-i to computer to play the video by the supporting media player.

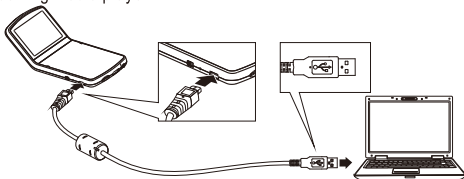

- * Please stop recording before connecting HD Mobile-i to PC.
- * If you want to save the video forever, please copy the video to your PC.
- * If you find the video does not synchronize with sound or has temporary stop when play back the video in computer, please check if the computer configuration or the media player version is too low.
- * Suggest PC configuration: 2G CPU or higher, 2G DDR or higher, 256MB RAM or higher, 10G free disk space or higher.
- * Use our player to replay video. (For details please refer to player software installation and startup).

Software Installation for Player

⚠ Before installations, please close any anti-virus software in the computer, otherwise the player may not be installed successfully.

1. Insert the CD into CD-ROM driver and you'll find there are two programs in the CD. Please select the one "Mobile-iPlayerSetup GPS.exe"  and execute this program ;

 The other one program "Mobile-iPlayerSetup.exe"  is suitable for other models without GPS function.

2. Select a language (Defaulted language is English) and click 'Next' ;



3. Choose a path to save the program, or it'll be saved under the defaulted path. Click 'Next' after finish ;




4. Enter into installation interface ;



5. Click on 'Finish' to complete ;

 


 
6. Now the "Mobile-i Player GPS" quick icon  will show on the desktop automatically;

7. Installations finish.

Start Player

Double-click the shortcut icon  on the desktop to start the player. It is for video playback, GPS and G-sensor data display, ect.

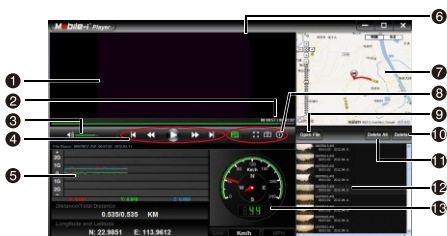








- ❶ Video display
- ❷ Video total playing time and played time
- ❸ Volume adjustment (Use mouse to adjust)
- ❹ Play button
- ❺ G-Sensor display
- ❻ GPS icon (Without GPS function, the icon will change to )
- ❼ Map display (Make sure the computer have connected to network and have access to <http://maps.google.com/>, or it won't display map.)
- ❽ Continuous play (Auto play the next video), full screen, capture, and about
- ❾ Video import (Click on the top of 'Open File' to add in the video.)
- ❿ Delete the selected video
- ⓫ Delete all the videos in player
- ⓬ Video thumbnails
- ⓭ Speed and direction display

Video Deletion


1. Use Mobile-i buttons to delete video.

a. Delete the unlocked videos.

 
- ❶ Under the condition of Mobile-i is on and stop recording, double press on <Mode  > to enter into video preview mode.
- ❷ Use <Up  >, <Down  >, <Mode  > and <Enter  > to select video.
- ❸ Press on <Power Switch  > to access to full screen.

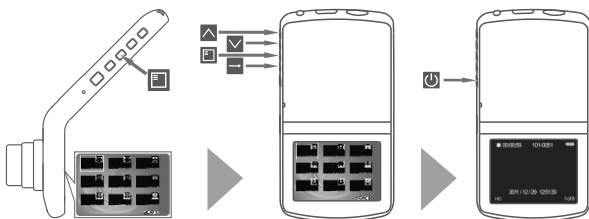

 
- 4 Press on <Enter [Enter]> to enter into deletion interface.



 - 5 Use <Up [Up]> and <Down [Down]> to choose delete the video, cancel delete the video or delete all the videos.

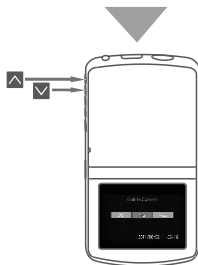

 
- 6 Press on <Power Switch [Power]> to confirm the deletion and then press on <Mode [Mode]> to quit.

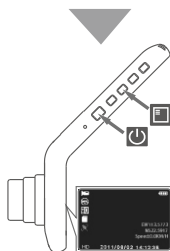

b. Delete the locked movies.

! You can not directly delete the videos which are locked. If you want to delete, please release the lock first and then delete. You can also format the Mobile-i to delete or connect it to computer to delete.

 - 1 Under the interface of 'Video Deletion ... 1. a. 3' to press on <Enter [Enter]> and a dialog box will show up automatically.

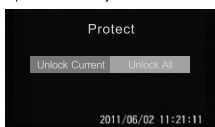

! Make sure there are videos are locked, or the dialog box will not show up.

- 2 Use <Up [Up]> and <Down [Down]> to select a video and then press on <Power Switch [Power]> to release the lock.

! If no need to release the lock, please press on <Mode [Mode]> to quit.

- 3 Press on <Enter [Enter]> to enter into deletion.

 
- 4 Use <Up [Up]> and <Down [Down]> to choose delete the video, cancel delete the video or delete all the videos.

- 5 Press on <Power Switch [Power]> to confirm the deletion and then press on <Mode [Mode]> to quit.


2. Delete video by PC

- Remove the Micro SD card from Mobile-i, and then insert the SD card into the card reader and connect it to computer. Now it can be used as a large removable disk. Find out the desired video and delete it directly.
- Use the USB cable to connect Mobile-i to computer to find out the desired video and delete it directly.

! When using computer to delete video, please do not delete any TXT format files for the videos you need, G-sensor and other data will not display on the player during video playback.

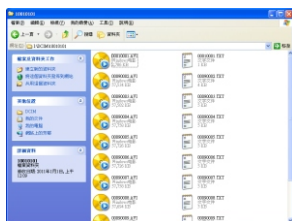

 - Execute player software, select the video and click on 'Delete' to delete the selected video. Click on 'Delete All' to delete all the videos in the player.

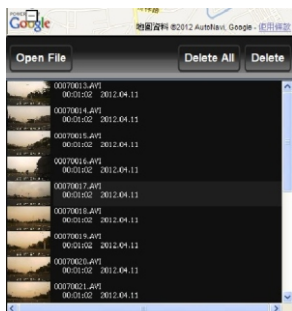

LED Status

Working Status	Red	Green	Blue
Power Off	OFF	OFF	OFF
Power On	OFF	ON	ON (Off under battery in full charge)
Recording	FLASH	ON	ON (Off under battery in full charge)
USB Mode(SD Card Inside)	OFF	ON	ON (Off under battery in full charge)
USB Mode(No SD Card)	ON	ON	ON (Off under battery in full charge)
Li-ion Battery Low	OFF	OFF	Flash and then shutdown automatically

Specifications

Image Sensor	1.0 Mega Pixel
Lens	4G, f=2.6mm F=2.0
Lens Viewing Angle	120°
Focus Range	1.8m to infinity
LCD Display	2.4" TFT LCD
AV Output	HDMI Port
PC Interface	USB2. 0
Video Format	AVI
Video Resolution	1440 x 1080, 1280 x 720, 640 x 480
Video Compress Format	MPEG-4AVC/H.264
Audio	Built-in Microphone / Speaker
Recording Media	Support Micro SD Card 2GB~32GB
Record	Cycle, Non Cycle
RTC	Yes
OSD Language	Multi-language
Power Supply	12V / 24V convert to 5V, Built-in Li-ion Battery 3.7V
Size (Main Unit)	130 x 63 x 43mm
Weight (Main Unit)	97G
Working Temperature	-10~60 °C
Storage Temperature	-30~70 °C

- !** 1. Please use the built-in li-ion battery along only under the condition of suddenly failing to supply power by car. Do not use it for other product power supply.
2. You need to reset the time for Mobile-i under the conditions of Mobile-i is not in use for a long time, or it is the first time being used or the power master switch is slid to off.
3. The time for GPS receiver to get signal depends on weather and environment etc.
4. Do not connect Mobile-i to computer just when the screen picture shows up, or it will cause black screen.

-----Warranty Terms & Conditions -----

Thank you for your purchase. OITEZ offers you free repair service for a period of 12 months from the date of purchase with the following terms and conditions:

- Free repair service will be provided upon presentation of this warranty certificate together with proof of purchase.
- Damages caused by accident, misuse, inappropriate power input, negligence, liquid immersion, outer cover / parts breakage or battery liquid leakage will not be covered.
- Should the product be disassembled, converted or repaired by any person not from our company, this free warranty will be voided and repair service charge and parts costs will apply.
- Replacement of parts (case, LCD display unit etc.) or battery are to be charged at cost.
- Should the cause of damage be arose from dirt/residuals a parts charge will apply.
- Under no circumstances will the free warranty period be extended.

Oriental Inspiration Limited

Unit 607, 6/F., The Lakeside 2, West Wing, No. 10 Science Park
West Avenue, Hong Kong Science Park, Shatin, New Territories, Hong Kong
Tel: (852) 2687 - 3496

Service Hours:

Mon to Fri-9:30am to 1:00pm, 2:00pm to 6:00pm
Close on Saturdays, Sundays and Public Holidays

 ITEZ™



佳骏(环球)有限公司
ORIENTAL INSPIRATION LIMITED